

Programming Remote to TV

Pulse IR

Programming Remote to Operate your TV

1. Turn TV on.
2. Press and hold the **Setup** button until the LED blinks twice.
3. Press and hold the **OK** button until the TV turns off.

Linking the STB to the Remote

1. Press and hold these keys at the same time until the LED blinks twice:

Setup + 1 for a Cisco box

Setup + 5 for a Motorola or Arris Box



844.354.4111

nuvera.net