


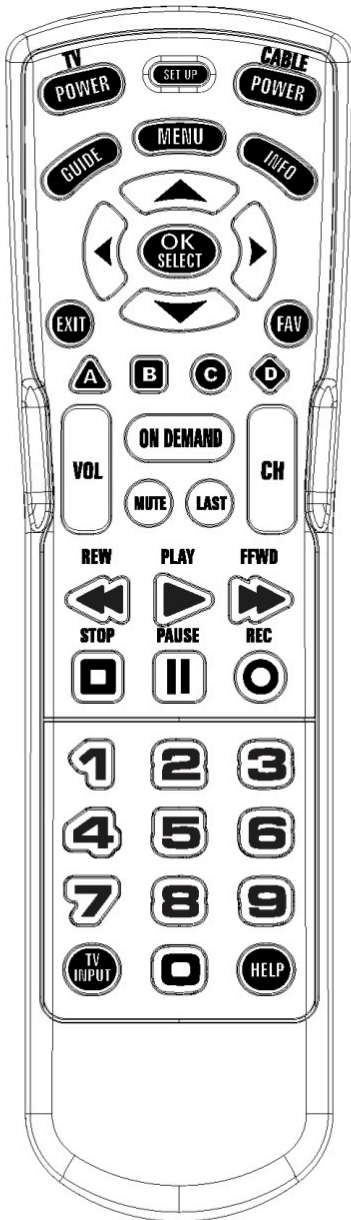











 






Remote Reference Guide

URC2060B0



-  Turns TV on or off
-  Hold for 3 seconds to enter programming
-  Turns cable box on or off
-  Displays program guide
-  Displays main cable menu
-  Displays Info for currently selected program
-  Use to navigate and select menu and guide options
-  Exits current menu and returns to current program
-  Used to cycle through favorite channels set on your cable box
-  Used for special functions that display on your cable menus
-  Turns volume up and down
-  Accesses On Demand program library
-  Use to turn volume off
-  Recall last channel viewed
-  Use to tune channel up or down
-  Controls playback of live and recorded TV
-  Allows for direct access to specific channel
-  Used to cycle through video inputs on TV
-  Use to access cable help menus